

### Normal Maintenance Schedule

The following maintenance services must be performed to ensure good emission control and performance. Keep receipts for all vehicle emission services to protect your warranty. Where both mileage and time are shown, the frequency of service is determined by whichever occurs first.

| MAINTENANCE<br>ITEM               | MAINTENANCE<br>INTERVALS | Number of months or driving distance, whichever comes first                                             |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |
|-----------------------------------|--------------------------|---------------------------------------------------------------------------------------------------------|-----|----|------|----|------|----|------|----|------|-----|-----|-----|-----|-----|-----|
|                                   |                          | Months                                                                                                  | 12  | 24 | 36   | 48 | 60   | 72 | 84   | 96 | 108  | 120 | 132 | 144 | 156 | 168 | 180 |
|                                   |                          | Miles                                                                                                   | 7.5 | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 | 67.5 | 75  | 83  | 90  | 98  | 105 | 113 |
|                                   |                          | Km                                                                                                      | 12  | 24 | 36   | 48 | 60   | 72 | 84   | 96 | 108  | 120 | 132 | 144 | 156 | 168 | 180 |
| HSG belts <sup>*1</sup>           |                          | Inspect every 7,500 miles or 12 months,<br>and replace every 67,500 miles or 48 months                  |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |
| Engine oil and engine oil filter  |                          | R                                                                                                       | R   | R  | R    | R  | R    | R  | R    | R  | R    | R   | R   | R   | R   | R   | R   |
| Fuel additives <sup>*2</sup>      |                          | Add fuel additives every 7,500 miles or 12 months                                                       |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |
| Air cleaner filter                |                          | I                                                                                                       | I   | R  | I    | I  | R    | I  | I    | R  | I    | I   | R   | I   | I   | R   | I   |
| Spark plugs                       |                          | Replace every 97,500 miles                                                                              |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |
| Rotate tires                      |                          | Rotate tires every 7,500 miles                                                                          |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |
| Climate control air filter        |                          | R                                                                                                       | R   | R  | R    | R  | R    | R  | R    | R  | R    | R   | R   | R   | R   | R   | R   |
| Vacuum hose                       |                          | I                                                                                                       | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Engine coolant / Inverter coolant |                          | At first, replace at 120,000 miles or 10 years :<br>after that, replace every 30,000 miles or 24 months |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

<sup>\*1</sup> : Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If drive belt noise occurred, readjust drive belt tension before replace.

<sup>\*2</sup> : If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized HYUNDAI dealer along with information on how to use them. Do not mix other additives.

7-9

Maintenance

7

### Normal Maintenance Schedule (CONT.)

| MAINTENANCE<br>ITEM                       | MAINTENANCE<br>INTERVALS | Number of months or driving distance, whichever comes first |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |
|-------------------------------------------|--------------------------|-------------------------------------------------------------|-----|----|------|----|------|----|------|----|------|-----|-----|-----|-----|-----|-----|
|                                           |                          | Months                                                      | 12  | 24 | 36   | 48 | 60   | 72 | 84   | 96 | 108  | 120 | 132 | 144 | 156 | 168 | 180 |
|                                           |                          | Miles                                                       | 7.5 | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 | 67.5 | 75  | 83  | 90  | 98  | 105 | 113 |
|                                           |                          | Km                                                          | 12  | 24 | 36   | 48 | 60   | 72 | 84   | 96 | 108  | 120 | 132 | 144 | 156 | 168 | 180 |
| Battery condition                         |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Brake lines, hoses and connections        |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Engine clutch actuator hoses and lines    |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Disc brakes and pads                      |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Steering gear rack, linkage and boots     |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Driveshaft and boots                      |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Suspension mounting bolts                 |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Air conditioner refrigerant               |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Air conditioner compressor                |                          | I                                                           | I   | I  | I    | I  | I    | I  | I    | I  | I    | I   | I   | I   | I   | I   | I   |
| Exhaust pipe and muffler                  |                          |                                                             | I   |    |      | I  |      | I  |      | I  |      | I   |     | I   |     | I   |     |
| Dual clutch transmission fluid            |                          |                                                             |     |    |      |    | I    |    |      |    |      | I   |     |     |     |     | I   |
| Vapor hose, fuel filler cap and fuel tank |                          |                                                             |     |    |      | I  |      |    |      | I  |      |     |     | I   |     |     |     |

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

7-10

### Normal Maintenance Schedule (CONT.)

| MAINTENANCE<br>ITEM                | MAINTENANCE<br>INTERVALS | Number of months or driving distance, whichever comes first |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |
|------------------------------------|--------------------------|-------------------------------------------------------------|-----|----|------|----|------|----|------|----|------|-----|-----|-----|-----|-----|-----|
|                                    |                          | Months                                                      | 12  | 24 | 36   | 48 | 60   | 72 | 84   | 96 | 108  | 120 | 132 | 144 | 156 | 168 | 180 |
|                                    |                          | Miles                                                       | 7.5 | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 | 67.5 | 75  | 83  | 90  | 98  | 105 | 113 |
|                                    |                          | Km                                                          | 12  | 24 | 36   | 48 | 60   | 72 | 84   | 96 | 108  | 120 | 132 | 144 | 156 | 168 | 180 |
| Fuel tank air filter <sup>*3</sup> |                          |                                                             | I   |    |      | I  |      |    | I    |    |      | I   |     |     | I   |     |     |
| Fuel filter <sup>*3</sup>          |                          |                                                             | I   |    |      | I  |      |    | I    |    |      | I   |     |     | I   |     |     |
| Fuel lines, hoses and connections  |                          |                                                             |     |    | I    |    |      |    | I    |    |      | I   |     |     | I   |     |     |
| Parking brake                      |                          |                                                             | I   |    |      | I  |      |    | I    |    |      | I   |     |     | I   |     |     |
| Brake fluid                        |                          |                                                             | I   |    |      | I  |      |    | I    |    |      | I   |     |     | I   |     |     |
| Engine clutch actuator fluid       |                          | Inspect every 7,500 miles, and replace every 22,500 miles   |     |    |      |    |      |    |      |    |      |     |     |     |     |     |     |

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

<sup>\*3</sup> : Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem, etc. replace the fuel filter immediately regardless of maintenance schedule and consult an authorized HYUNDAI dealer for details.

Maintenance

7